


LEVEL PROBE CONVERTER

CONNECTION DIAGRAM

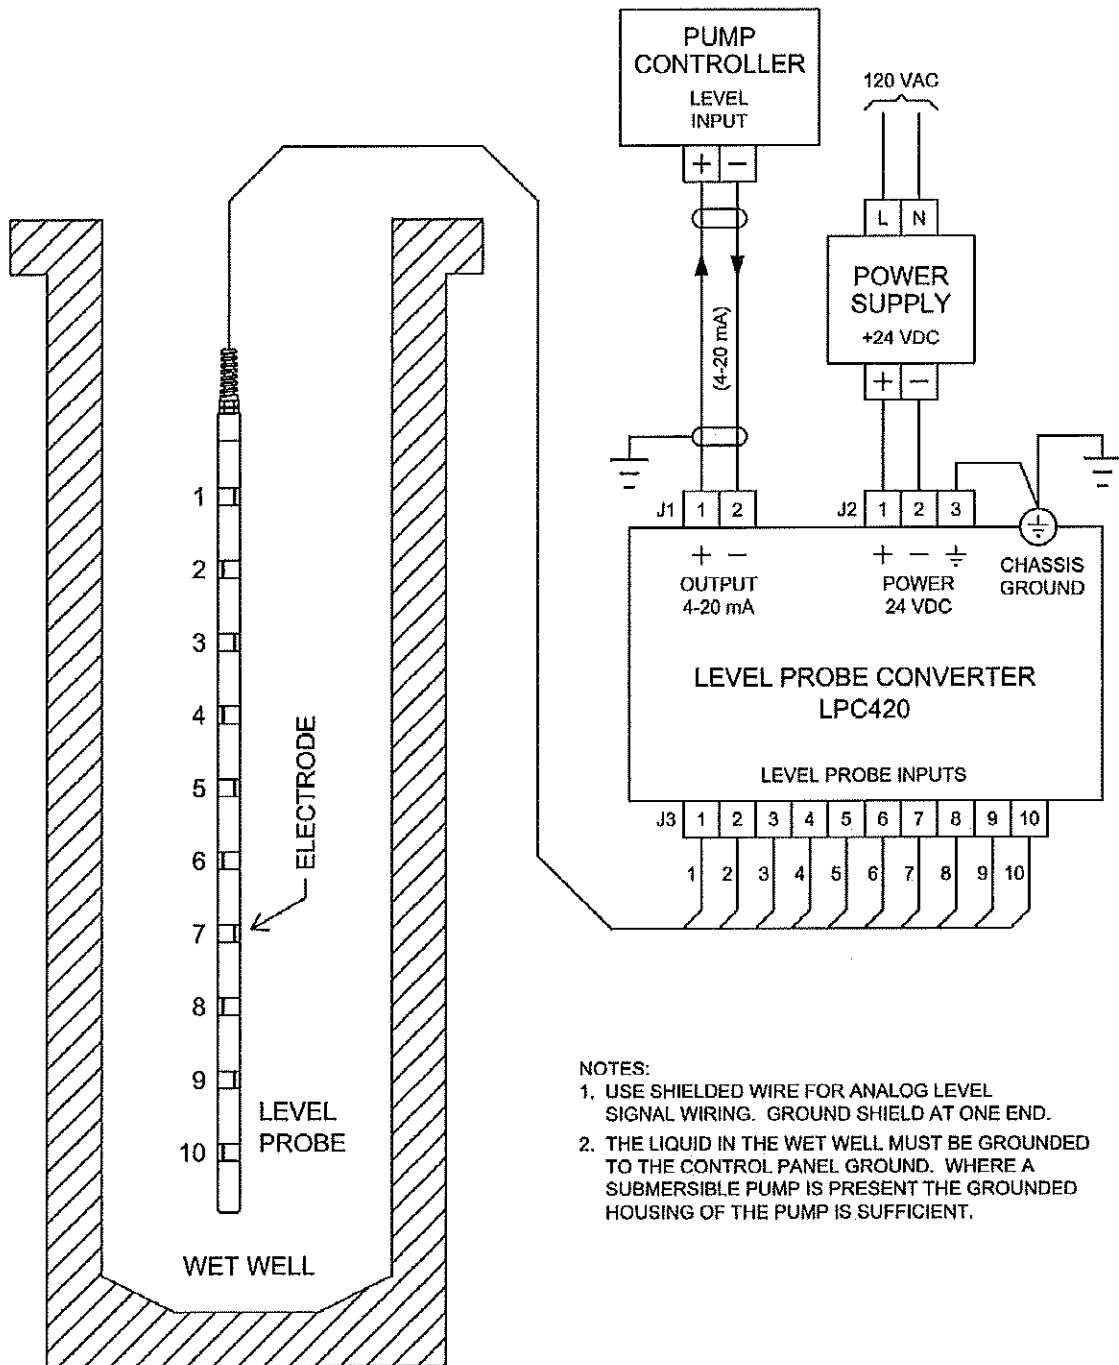

NOTES:

1. USE SHIELDED WIRE FOR ANALOG LEVEL SIGNAL WIRING. GROUND SHIELD AT ONE END.
2. THE LIQUID IN THE WET WELL MUST BE GROUNDED TO THE CONTROL PANEL GROUND. WHERE A SUBMERSIBLE PUMP IS PRESENT THE GROUNDED HOUSING OF THE PUMP IS SUFFICIENT.